
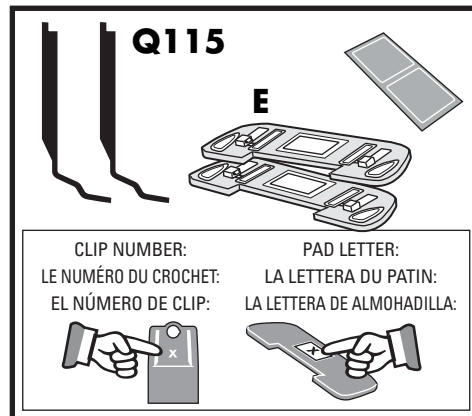
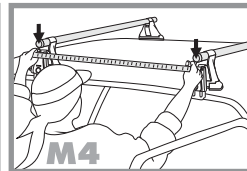
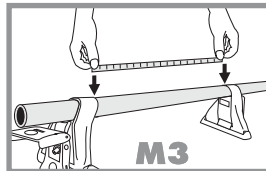
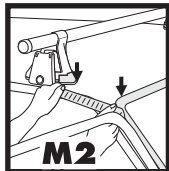


YAKIMA Q115

CLIPS / PADS

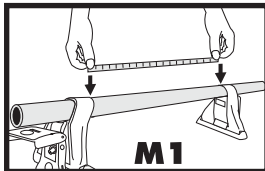

		M1		M2		M3		M4	
HONDA									
Civic Coupe with Q Stretch Kit	01-05	Q115-E 38-1/8"	7"	Q115-E 39-3/8"	30"				114,123

Look at the notes that apply to your vehicle.
 Consultez les notes qui concernent votre véhicule.
 Lea la información que se refiere a su vehículo.

114

Caution! Check clips after installing. Grab each clip and try to pull them away from your vehicle. Pull hard! If the clip moves tighten the adjustment post. If the clip still moves, recheck your measurements between the towers and adjust if necessary. Check clip again.

Attention! Après le montage, vérifier les crochets. Tirer sur chaque crochet pour essayer de l'éloigner de la voiture. Tirer fort! Si le crochet bouge, serrer la vis de réglage. S'il bouge encore, vérifier la distance entre les pieds et la corriger au besoin. Vérifier le crochet de nouveau.

¡Atención! Verifique los clips después de instalados. Agarre cada clip y trate de apartarlo del vehículo. ¡Tire fuerte! Si el clip se mueve apriete el poste de ajuste. Si todavía se mueve, vuelva a medir entre los soportes y ajuste si es necesario. Verifique nuevamente el clip.

123

The Stretch Kit must be used with this option. Slide the Stretch Kit housing all the way forward.

Avec cette option, il est obligatoire d'employer le Stretch Kit. Glisser le boîtier du Stretch Kit le plus en avant possible.

Con esta opción debe usarse el Juego de alargadores Stretch. Deslice la caja del alargador todo lo posible hacia adelante.